

KEEP YOUR HOTRONIX® FUSION IQ™, SPRINT® MAG & MAXX™ CLAM IN SHAPE WITH THE FOLLOWING ACTIONS

COMMISSIONING OF THE HEAT PRESS

- do not use a lifting device to remove the press from the box
- read the operating manual before commissioning
- use own power supply
- do not use extension cables and multiple plugs
- use the supplied power cable

MAINTENANCE OF THE PRESS

Tips for low-maintenance operation

- observe maximum pressure setting
- cover sheet / heating plate protection cover recommended to protect heat platen
- quick slip pad protector recommended to protect the rubber mat on the lower platen
- replace worn silicone mat

DAILY MAINTENANCE WORK TO BE CARRIED OUT

- checking the functions and settings
- do not continue to use the press if it is damaged or malfunctions, contact your dealer

WEEKLY MAINTENANCE WORK TO BE CARRIED OUT

- cleaning the surfaces of the press and the working area

MONTHLY MAINTENANCE WORK TO BE CARRIED OUT

- if the heat platen is dirty, clean it with the heat platen cleaner and heat eraser
- relubricate the pressure spindle with temperature-resistant lithium grease

ANNUAL MAINTENANCE WORK TO BE CARRIED OUT

- relubricate exposed linkage
- check heat platen for cold spots, check calibration