



MAINTENANCE

Commissioning of the heat press

- do not use a lifting device to remove the press from the box
- read the operating manual before commissioning
- use own power supply
- do not use extension cables and multiple plugs
- use the supplied power cable

Maintenance of the press

Tips for low-maintenance operation

- observe maximum pressure setting
- cover sheet recommended to protect heat platen

Daily maintenance work to be carried out

- checking the functions and settings
- do not continue to use the press, if it is damaged or has malfunctions, contact your dealer

Weekly maintenance work to be carried out

- cleaning the surfaces of the press and the working area

Monthly maintenance work to be carried out

- if the heat platen is dirty, clean it with the heat platen cleaner and heat eraser
- relubricate the pressure spindle with temperature-resistant lithium grease

Annual maintenance work to be carried out

- relubricate exposed linkage
- check heat platen for cold spots, check calibration

Contact:

STAHL'S' Europe GmbH • Dieselstraße 62 • 66763 Dillingen • Germany
Telefon: +49 (0) 68 31/97 33-0 • Fax: +49 (0) 68 31/97 33 45
www.stahls.de • info@stahls.de

STAHL'S'
EUROPE • AFRICA • MID EAST