

## APPLICATION INSTRUCTIONS

No trimming necessary | For laser colour printers and almost any laser copier | Transfer adheres only where toner is applied to the paper

STEP 1




Create your design and output to your laser printer or copier.

**The blank white side is the printable side. The labeled side does not get printed on.**

**NOTE:** Do not forget to mirror your image before you sending it to the printer.

STEP 2

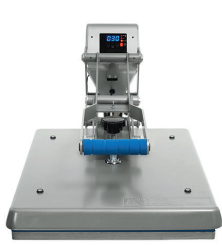


Pre press your garment between 3 - 5 sec. at 165 °C to remove any creases or moisture.

STEP 3



Position STAHL'S Freestyle transfer paper with the image side down on your textile.


STEP 4

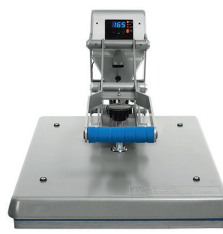

Apply for 30 sec. at 165 °C at firm pressure.

Peel hot after 3 sec.

STEP 5

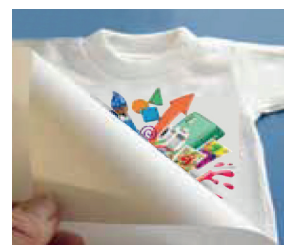

Cover your print with release paper or your teflon sheet and reseat for an additional 10 sec.

## APPLICATION DATA

Name	for	Temperature	Time	Pressure	Remove carrier	Re-press	Recommended for	washable up to
Freestyle	CLC	165° C	30 sec.	firm	Peel hot after 3 sec.	10 sec.	Cotton, Poly-Cotton	30° C

## TECHNICAL INFORMATIONS

### INSTRUCTION FOR PRINTING ON TRANSFERS

Feed each sheet individually into the copier and use the setting for 'heavy paper'.

**NOTE:** The design always has to be mirrored!

### INSTRUCTION FOR APPLICATIONS ON TEXTILES

Place the CLC Paper on your garment with the colour layer facing downwards. Please use for reapply a Grip-coversheet!